



SPL SERIES LCR INSTALLATION GUIDE

Step 1 – Unpack the carton. You should have 1 plasma/LCD/LED speaker bar and 2 long brackets



Step 2 – Lay your TV face down on a pad or other protected surface.

Lay the speaker face down along the bottom of the TV. The bar should be the same length as the TV, so center the bar under the TV.




Step 3 – Take the first bracket and loosen the 2 slider screws.

Step 4 – Then loosen the 2 top clamp screws.

Step 5 – Then loosen and remove the 2 bottom clamp screws.

Step 6 – Remove and set aside the bottom clamp.

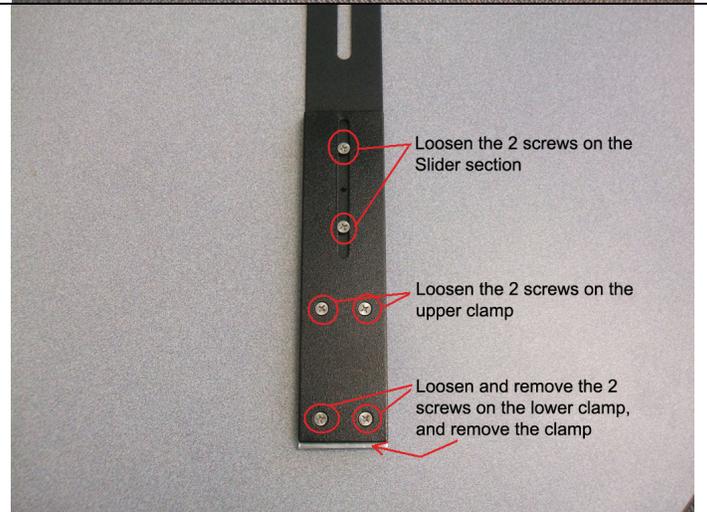


Step 7 – Lay the first bracket on the rear of the TV and speaker, lining up the slot in the bracket with the bracket mounting holes in the TV.




Step 8 – Place the wall hanging bracket (Supplied by you) on top of the speaker bracket and install the mounting screws but **DO NOT TIGHTEN THE SCREWS** – the bracket needs to be able to move freely.


NOTE: If your TV mount is a single piece mount then you will need to have the second speaker bracket in place and the TV mount will go over both brackets.

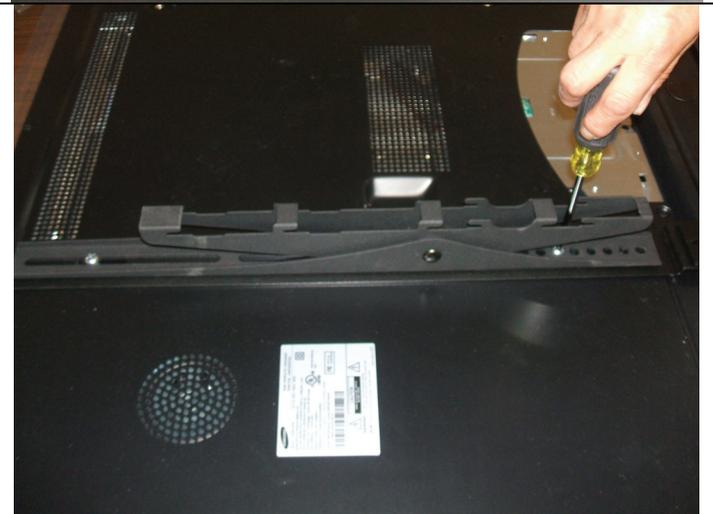

Step 9 – Since all the screws are loose, you can slide the upper clamp into the upper groove in the rear of the speaker.

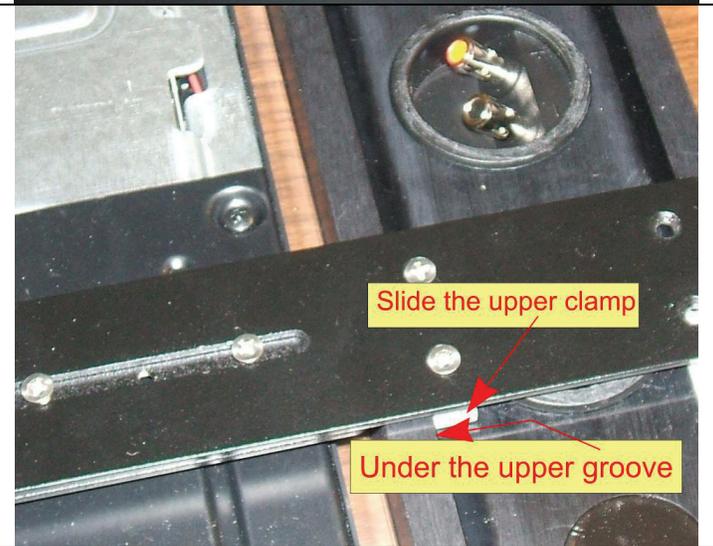

Step 10 – Place bottom clamp into the bottom groove of the speaker.

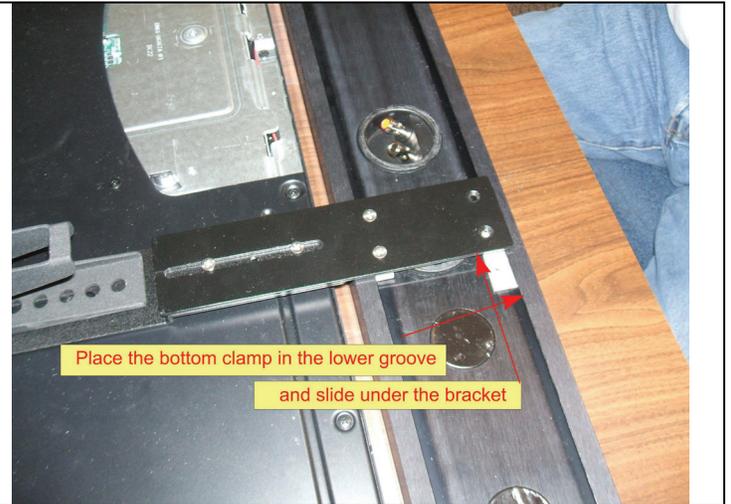

Step 11 – Slide the bottom clamp fully under the bracket while aligning the 2 screw holes in the bracket with the 2 screw holes in the lower clamp.

Reinstall into the clamp the 2 screws you removed initially, but do not tighten them yet.

NOTE: At this point, the bracket should be captive to the speaker, but free to slide left to right. If the bracket cannot move, then you have over tightened the screws, loosen them slightly.



Step 12 – Install the second bracket in the same manner.



Step 13 – At this point, both brackets are loose and can be moved up and down and the speaker can slide left and right.

Make sure the speaker is correctly aligned flush with the TV edges (left to right) and push the speaker up tight against the TV from the bottom and tighten the 4 screws in the 4 clamps and repeat on the other bracket.

Step 13 – Tighten the screws that hold the long bracket to the short slider bracket and repeat on the other bracket

NOTE: You may need to finesse the bracket up and down and left to right to make sure everything is lined up and can be tightened properly.




Step 14 – Tighten the screws that hold the brackets and TV mount to the rear of the TV and that the speaker is tight against the bottom of the TV – we want to minimize any gaps here for the best esthetic.

Step 15 – Check that all the screws in both brackets and on the rear of the TV are tight.

Step 16 – Hang the TV on the wall.

NOTE: We have not discussed when the speaker wires should be attached – this depends on the type of installation. We leave it up to you to make the choice of connecting the wires while installing the brackets or after.

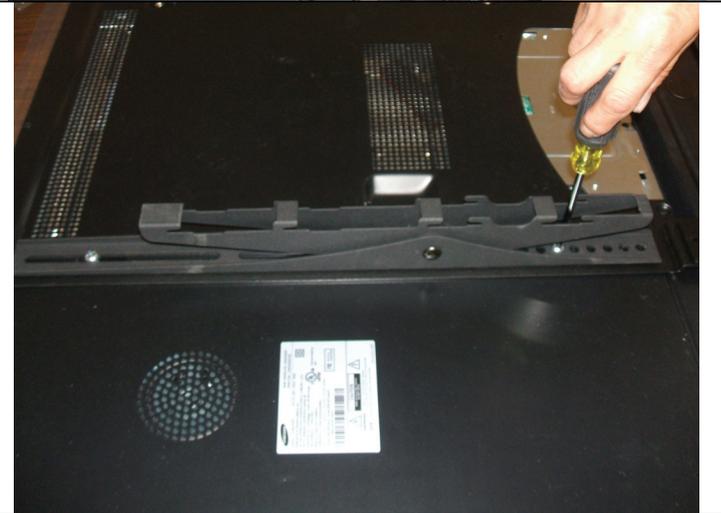

Enjoy your new TV!

Rev A